



CODE SAFE

STOPS VEHICLE THEFT

CODE SAFE IMMOBILISER

Customer Handbook :



INSTRUCTIONS.

Arming the System (immobiliser ON)

- Automatic Arm:

When the ignition switch is turned off, the system arms automatically. After 30 sec, the keypad blinks.

- * Manual Arm:

Press THE STAR and hold for about 2 seconds. The system will then make> a long beep followed by two short beeps, signalling that the keypad is being armed.

Disarming the System (immobiliser OFF)

1. Open the door > The keyboard illuminates > The keypad is flashing slowly
2. Enter your code + the star button on your keypad to disarm your immobiliser

You will hear two beeps, and the system will be disarmed.

3. Turn the ignition or push your button switch to start the engine.

Note: Four beeps are emitted if an invalid code is entered, and the keypad remains flashing. Three invalid attempts block the keyboard for five to twenty minutes. Your car is immobilise

Changing Your Code - IMPORTANT INFORMATION

When your registered installer installs your CODE SAFE keypad in your vehicle, they will use the security protocol database to store all your details, including your original data. If the keypad malfunctions, your CODE SAFE installer can help you override it with the original master code over the phone. You must give them all your details before they give out the master code.

Your CODE SAFE installer will save your information, including your original data, in the security protocol database when they install your keypad. If your keypad malfunctions, your installer can give you the original

master code over the phone to override it, but only after you confirm all your detail

Remember, if you wish to change your code

regularly, keep a log book safe with all your code

information so you will never forget your original and

updated changes.



CHANGING YOUR CODE:

Turn off the ignition switch

1. Enter your personal (or master) code and press star.
2. Turn on the ignition switch > When the star keypad flashes, press the star > short beep > star button turns off
3. Enter a new 4 to 6-digit code > press star > short star -Keypad flashes

4. Enter the new code again > press star > two short beeps.
5. Your code has now changed.

Our Registered CODE SAFE installers are accredited auto electricians and professional installers who warrant their installations. Once installed, your CODE SAFE installer will provide all the required information and can always assist you if you forget your code. The system is designed with advanced security features to ensure the safety of your vehicle, and you can always rely on your installer for support.

Remembering your code – for your vehicle is *very* important. Keeping your code information safe, away from unauthorised access, is crucial. To ensure the security of your car and your peace of mind. Please don't share your information with anyone you don't trust. Keep your personal 4-5 digits SAFE. Don't leave a copy of your code in your vehicle. Please keep it safe on your phone or save the information where you hold all other passwords.

After installation, your installer will give you all the

necessary information and can always help you if you forget your code. The system has advanced security features to keep your vehicle safe, and your installer will always be available to support you.

"Even if the offender has the keys or key fob, your car is protected!!!



INSURANCE

Potential Insurance Premium Discounts. Secondary Immobilisers: ASKING FOR A DISCOUNT.

Installing a secondary immobiliser in your vehicle can lead to discounts on your insurance premium. This is because a secondary immobiliser is an additional theft deterrent, making your vehicle less attractive to thieves. Insurance companies may offer you a lower premium by reducing the risk of theft. The discount amount will vary depending on the insurance company, your policy, and the type of secondary immobiliser installed. You should contact your insurance provider directly to inquire about potential discounts and eligibility requirements.

Faults with keypads

If the keypad fails, you can reboot it by holding the star key down for 3 seconds until you hear a long beep.

Then, enter the correct code, press the star, turn on the vehicle, push the break and push the button or turn the key.

If the keypad is tampered with incorrectly three times, the CODE SAFE IMMOBILISER will shut down for 10-20 min until it rearms itself.

Once the vehicle is armed, the CODE SAFE is reset. To start your car, enter the CODE plus the STAR button and either push the button or turn the key as usual.



codesafe.solutions



CODE SAFE

STOPS VEHICLE THEFT



CODE SAFE KEYPAD ENGINE IMMOBILISER

Steps to change to 30 sec ARMING TIME:

1. Disarm using master or user code; two beeps will be heard.
2. Turn ignition on.
3. Press on one immediately until two beeps are heard.
4. Press on five immediately until two beeps are heard.
5. Turn the ignition OFF.
6. The unit will Arm after 30 sec.

Steps to change to 10 minutes: ARMING TIME

1. Disarm using master or user code; beeps will be heard.
2. Turn ignition on.
3. Press on one immediately until two beeps are heard.
4. Press on four immediately until two beeps are heard.
5. Turn the ignition OFF.
6. The unit will Arm after 10 minutes.

VALET MODE - when leaving your car for service.

- 1.** The system is armed (can not start the car)
- 2.** Put the Code in (the system is disarmed). Start your car.
- 3.** Within 30 seconds, Press the star button, hold for 30 seconds, then turn off the car.
- 4.** Two beeps and the car is in valet mode

VALET MODE OFF

1. Engine off
2. Press the star button and hold until you hear a long beep
3. Enter the Pin- Code (2 beeps).

The system is out of valet mode.





www.codesafesolutions.com.au

<https://www.codesafesolutions.com.au/category/locations/>